



DIP Switch Positions - Series I DB-1

one drawbar for both manuals

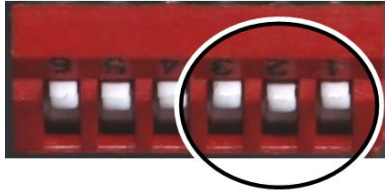

111: Electro / Electro 2 / 3 / 4

MIDI channel is set automatically

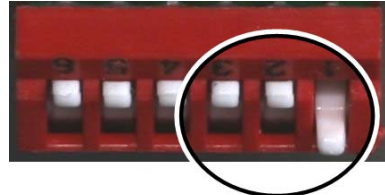

110: Stage / Stage EX / Stage 2

MIDI channel(s) must be programmed in Learn mode



101: C1 / C2


MIDI channels must be programmed in Learn mode

two drawbars - one per manual



100: C1 / C2 Electro / Electro 2 / 3 / 4 upper

MIDI channel must be programmed in Learn mode

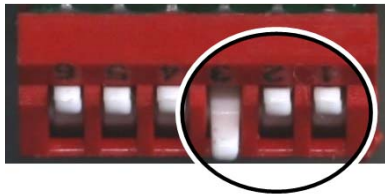


011: Electro / Electro 2 / 3 / 4 lower

MIDI channel must be programmed in Learn mode



010: Stage / Stage EX / Stage 2

MIDI channel must be programmed in Learn mode

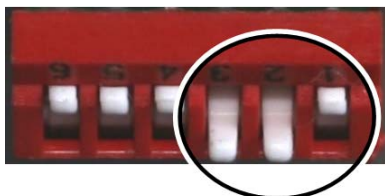

001: (unused)



000: GSi VB3 user defined via SYSEX

MIDI channel, polarity, and Control Change number programmed via Configurator App